


# Instruction Sheet:

## Bag Type Selection for the AC230-PC-29 Dairy Dispenser

The correct bag type must be selected for dispense accuracy. Use the Bag Select feature to choose the correct bag type by size, type, and product.

The default bag types for the AC230-PC-29 (two product dispenser) are Cream 5L L (left valve) and Milk 5L L (right valve).

Bag Type as it appears in the Display	Bag Type Description
Cream 5L L	5-liter Liquibox bag filled with 18% cream
Cream 5L S	5-liter Scholle bag filled with 18% cream
Milk 5L S	5-liter Scholle bag filled with 1% milk
Milk 5L L	5-liter Liquibox bag filled with 1% milk
Cream 2.5 G	2.5 gallon Liquibox bag filled with 18% cream

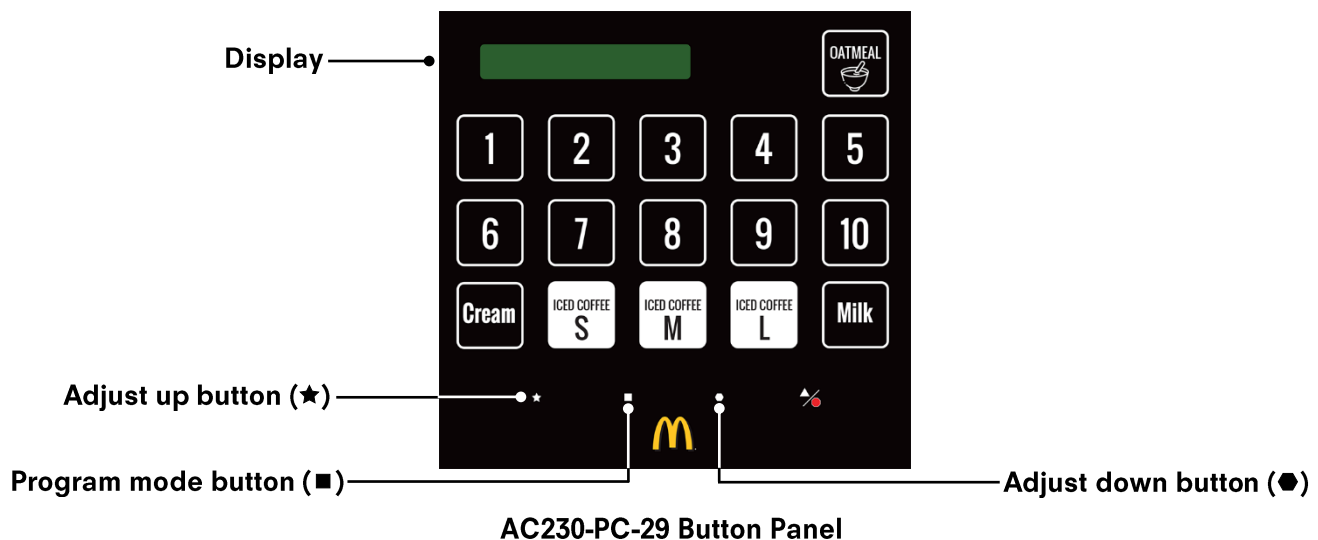

To change the bag type follow these steps:

1. Press and hold the **program mode button (■)** on the button panel until the display shows **Calibration**.
2. Press the **program mode button (■)** several times until **Bag Select** appears in the display.
3. Press the applicable product button (i.e., cream or milk). The current bag type will be visible in the display (e.g., **Cream 5L L**).
4. To change the bag type, press the **adjust up (★) or adjust down (●) button**.
5. Once the correct bag type appears in the display, press and hold the **program mode button (■)** to save and exit program mode.

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone (888 777-9990 or +1 902 865 9602) or email ([service@sureshotsolutions.com](mailto:service@sureshotsolutions.com)). Find other helpful instruction sheets and videos on our website at [www.sureshotsolutions.com](http://www.sureshotsolutions.com).