

 
Instruction Sheet:

Dairy Dispenser Decal Application (Model AC230-PC-29)

Complete the software update **BEFORE** applying the new decal.

Clean the Button Panel

1. Press and hold the **triangle button (▲)**, which is the new panel disable button location, until the lights on the button panel are flashing. Panel disable will automatically cancel after approximately 15 seconds. Press and hold the **triangle button (▲)** again if more time is needed for cleaning.
2. Clean the button panel with a soft cloth dampened with warm, clean, and soapy water.
3. Wipe the button panel using a soft cloth dampened with warm, clean water to remove any traces of soap.
4. Wipe the button panel dry with a soft cloth.

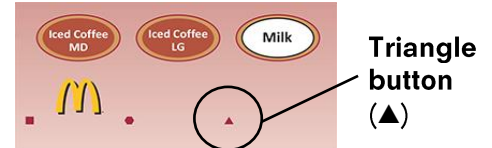

Apply the Button Panel Decal

 
1. Press and hold the **program mode button (■)** on the button panel until the display shows *Calibration*.
2. Press the **program mode button (■)** several times until the display shows *Service*.
3. Press the **2 shot quantity button** to turn on the button panel lights. The display will show *LED Test*.
4. Locate the cut line on the back of the button panel decal and peel away the top two inches. This will remove the plastic backing from behind buttons 1 through 5 to the top of the decal.

Peel away top
two inches of
plastic backing



5. Hold the bottom of the decal and position it on the button panel by aligning the holes above numbers 1 through 5 on the decal with the lights on the button panel. Do NOT let the top of the decal stick to the button panel while you are positioning it.
6. Once positioned, slowly and carefully press the decal into place starting with the numbers and working towards the edges.
7. Working from top to bottom, slowly peel away the rest of the plastic backing while carefully pressing the remaining portion of the decal in place.

Peel away
plastic backing

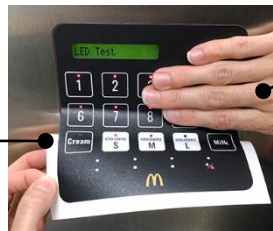

Press remaining
decal in place
from top to
bottom

8. Smooth out the decal to remove any bubbles or wrinkles. Any remaining air bubbles can be worked out by smoothing the decal towards the closest edge.
9. Turn off the dispenser. Wait 3 seconds, then turn on the dispenser.
10. Restaurants dispensing cream from both product cases must change the bag type (i.e., milk to cream) for dispense accuracy. To change the bag type scan the QR Code on the dispenser and refer to the **Bag Type Selection** instruction sheet. Once completed, apply the small cream button decal over the milk button.
11. The software's default bag size is 5 L. Restaurants using a 2.5 G (10 L) bag of cream must change the bag type in the software to *Cream 2.5 G*. To change the bag type refer to the **Bag Type Selection** instruction sheet.

If you have any questions or concerns while performing this procedure, please contact the SureShot Solutions Technical Assistance Center by phone (888 777-9990 or +1 902 865 9602) or email (service@sureshotsolutions.com). Find other helpful instruction sheets and videos on our website at www.sureshotsolutions.com.